



(260)-422-8823

OPERATING INSTRUCTIONS FOR MODEL 1832 SECURITY SYSTEM

To clear a mistake:

Press #

To arm the system when no one is staying inside the premises:

Enter the combination

The exit delay permits you to exit the delayed door. The system senses a delayed door was opened/closed and automatically activates the interior detection devices.

To bypass a detection device:

Press *1 and zones to be bypassed - Ex: 04 for zone 4, 05 for zone 5
Press # and the combination

To arm the perimeter while at home and later arm the interior:

Enter the combination (activates perimeter)
Press *1 (activates interior devices)

To reset the panic system:

Enter the combination

To reset the fire alarm:

- A) Before 30 seconds have elapsed - Press your 4-digit code to stop siren
**Press *72, or RESET button on the keypad,
to reset the detectors**

- B) After 30 seconds have elapsed - Press your 4-digit code to stop siren
**Press *72, or RESET button on the keypad,
to reset detectors**
Call 422-8823 to cancel the fire dispatch

To review an alarm event in memory (memory light on):

Press *3 - The zone/zones violated will blink

Press # to return to normal (Memory light may stay on until the system is rearmed)

To review a trouble condition (trouble light on and system beeping every 10 seconds):

Press *2 - A zone light will illuminate indicating the type of trouble

Press # to return to normal

Zone Light - 1 - Service Required - Press 1 (zone light will show troubled area)

1 - Low Battery

2 - Siren Trouble

3 - General System Trouble

4 - General System Tamper

5 - General System Supervisory

6 - Not Used

7 - PC5204 Low Battery

8 - PC5204 AC Power Failure

Zone Light - 2 - Loss of AC Power

Zone Light - 3 - Telephone Line Trouble

Zone Light - 4 - Fail to Communicate

Zone Light - 5 - Zone Fault - Press 5 (zone light will show troubled area)

Zone Light - 6 - Zone Tamper - Press 6 (zone light will show troubled area)

Zone Light - 7 - Low Zone Battery - Press 7 (zone light will show troubled area)

SILENT KNIGHT FIRE ALARM

Silence and Reset Alarm

Before 30 seconds have elapsed:

- Enter 4-digit code to stop siren
- Press *72, or, Press RESET button on the keypad

To reset detectors

After 30 seconds have elapsed:

- Press # to stop siren
- Press *72, or, Press RESET button on the keypad
- Call 260-422-8823 to cancel the fire dispatch